

Fiber Inspection Scope

- Optical Magnification of 200X
- LED Lifetime Rated at 100,000 Hours
- 225 mm (8.76") Long x Ø32 mm (1.25")
- Momentary On/Off Switch and Fine Focus Control
- Built-In Safety Filter

The CL-200 fiber microscope utilizes a white LED for coaxial illumination. Light is introduced into the optical path (axis) so that it comes out of the tip of the objective and strikes the sample perpendicular to the fiber end face. It produces an excellent detailed image of scratches and contamination. For critical examination of polish quality, we strongly recommend this fiber inspection scope. The inspection scope comes with an adapter for FC-, ST- and SC-terminated fibers. (Batteries Included)



FC, ST, and SC Adapters Included

CL-200

CL-200-SMA SMA Adapter

ITEM#	\$	£	€	RMB	DESCRIPTION
CL-200	\$ 202.00	£ 140.10	€ 179.40	¥ 1,705.70	Fiber Microscope
CL-200-SMA	\$ 20.40	£ 14.20	€ 18,20	¥ 172.30	SMA Fiber Microscope Adapter

Guide to Connectorization and Polishing Optical Fibers

- Connectorization
- Cleaving
- Polishing

Easy-to-Follow Step-by-Step Instructions




ITEM#	\$	£	€	RMB	DESCRIPTION
FN96A	\$ 6.90	£ 4.80	€ 6,20	¥ 58.30	Guide to Connectorization, Polishing, and Cleaving of Fibers

Connectorization Kits

Rubber Polishing Pad (FC and SC Kits only)

- Complete Kits
- Step-by-Step Instructions
- All Connectorization Kits Include
 - Glass Polishing Plate
 - 40 Sheets of Polishing Film
 - Polishing Disc
 - 200X Fiber Scope
 - Diamond Scribe
 - 20 Syringes
 - 2 m Furcation Tubing
 - Epoxy
 - Fiber Stripper
 - Kimwipes®
 - Wash Bottle
 - Crimp Tool
- The CK03 and CK05 Kits Include an Additional Rubber Polishing Pad that is Used to Produce PC (Radiused) Polishes.

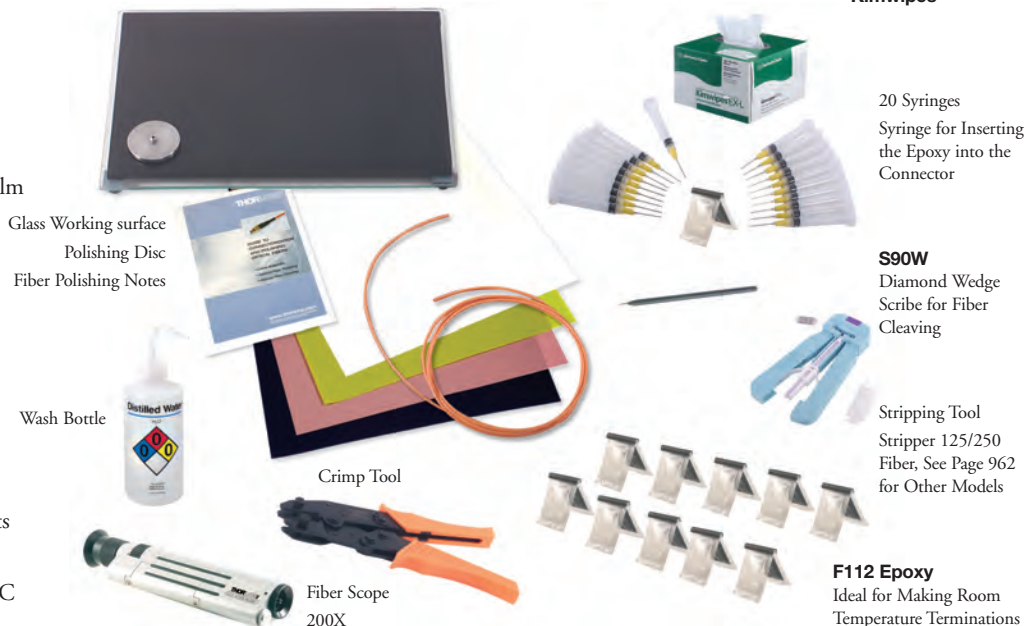

Kimwipes®

20 Syringes
Syringe for Inserting the Epoxy into the Connector

S90W
Diamond Wedge Scribe for Fiber Cleaving

Stripping Tool
Stripper 125/250
Fiber, See Page 962 for Other Models

F112 Epoxy
Ideal for Making Room Temperature Terminations

Items Not Included

- Connectors (See Pages 952 - 954)
- Fiber (See Pages 853 - 892)

ITEM#	\$	£	€	RMB	DESCRIPTION
CK01	\$ 553.00	£ 383.40	€ 491.00	¥ 4,669.60	SMA Connectorization Tool Kit
CK03	\$ 555.00	£ 384.80	€ 492,80	¥ 4,686.50	FC/PC and SC Connectorization Tool Kit
CK05	\$ 599.00	£ 415.30	€ 531,80	¥ 5,058.00	FC/APC Connectorization Tool Kit